

Installing Instructions

Three-Point Hitch

(384 674 R91)

for

INTERNATIONAL[®]

CUB CADET[®]

70 and 100

TRACTORS

INTERNATIONAL HARVESTER COMPANY

180 NORTH MICHIGAN AVE.

CHICAGO 1, ILLINOIS, U.S.A.

It is the policy of International Harvester to improve its products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to make such changes on products sold previously.


All illustrations and descriptive matter in this publication apply to International Harvester products sold under the International, McCormick, or McCormick-International trade name.

ORDERING NUMBER

384 674 R91 Three-Point Hitch for International Cub Cadet 70 and 100 Tractors

INSTALLING INTRUCTIONS

See Illusts. 1, 2, and 3

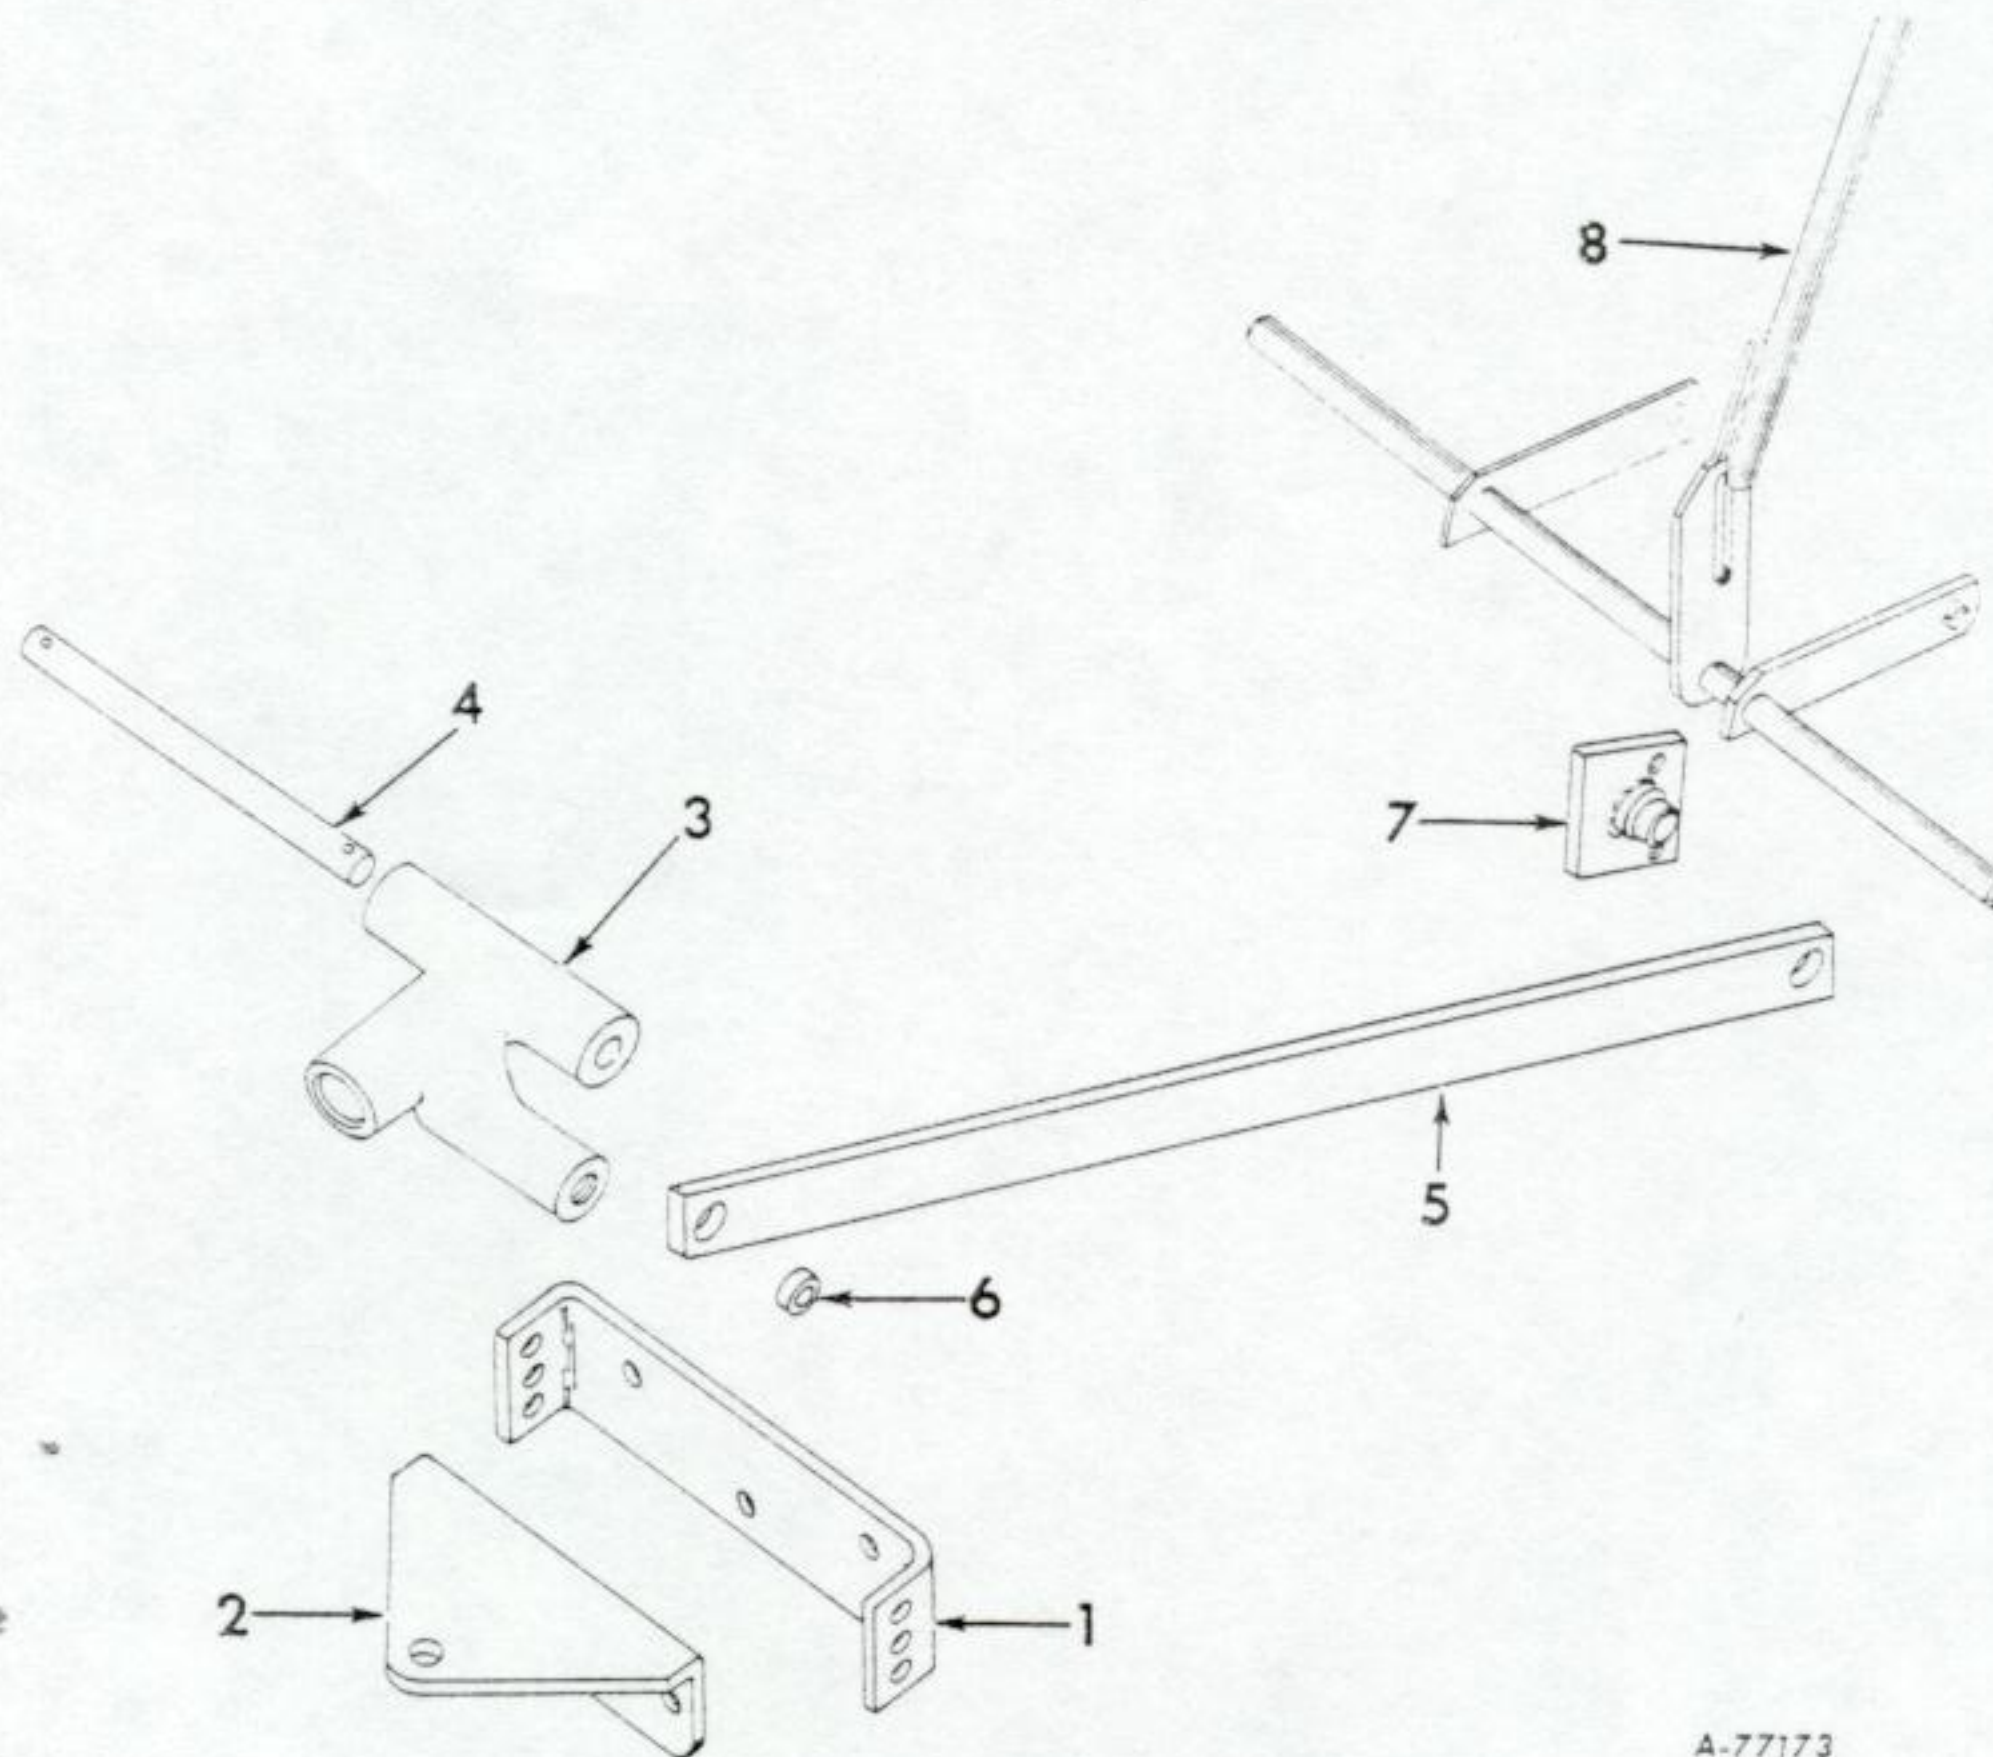


Illust. 1
Three-point hitch and fixed drawbar
showing relative positions of parts.

Ref. No.	Description
1	Lower hitch link
2	Fixed drawbar*
3	Lift lever
4	Lift lever shaft
5	Lift bar
6	Lift bar spacer
7	Lift bar attaching plate assembly
8	Lift handle assembly*

*On basic tractor-not included in the
Three-Point Hitch attachment

INSTALLING INSTRUCTIONS

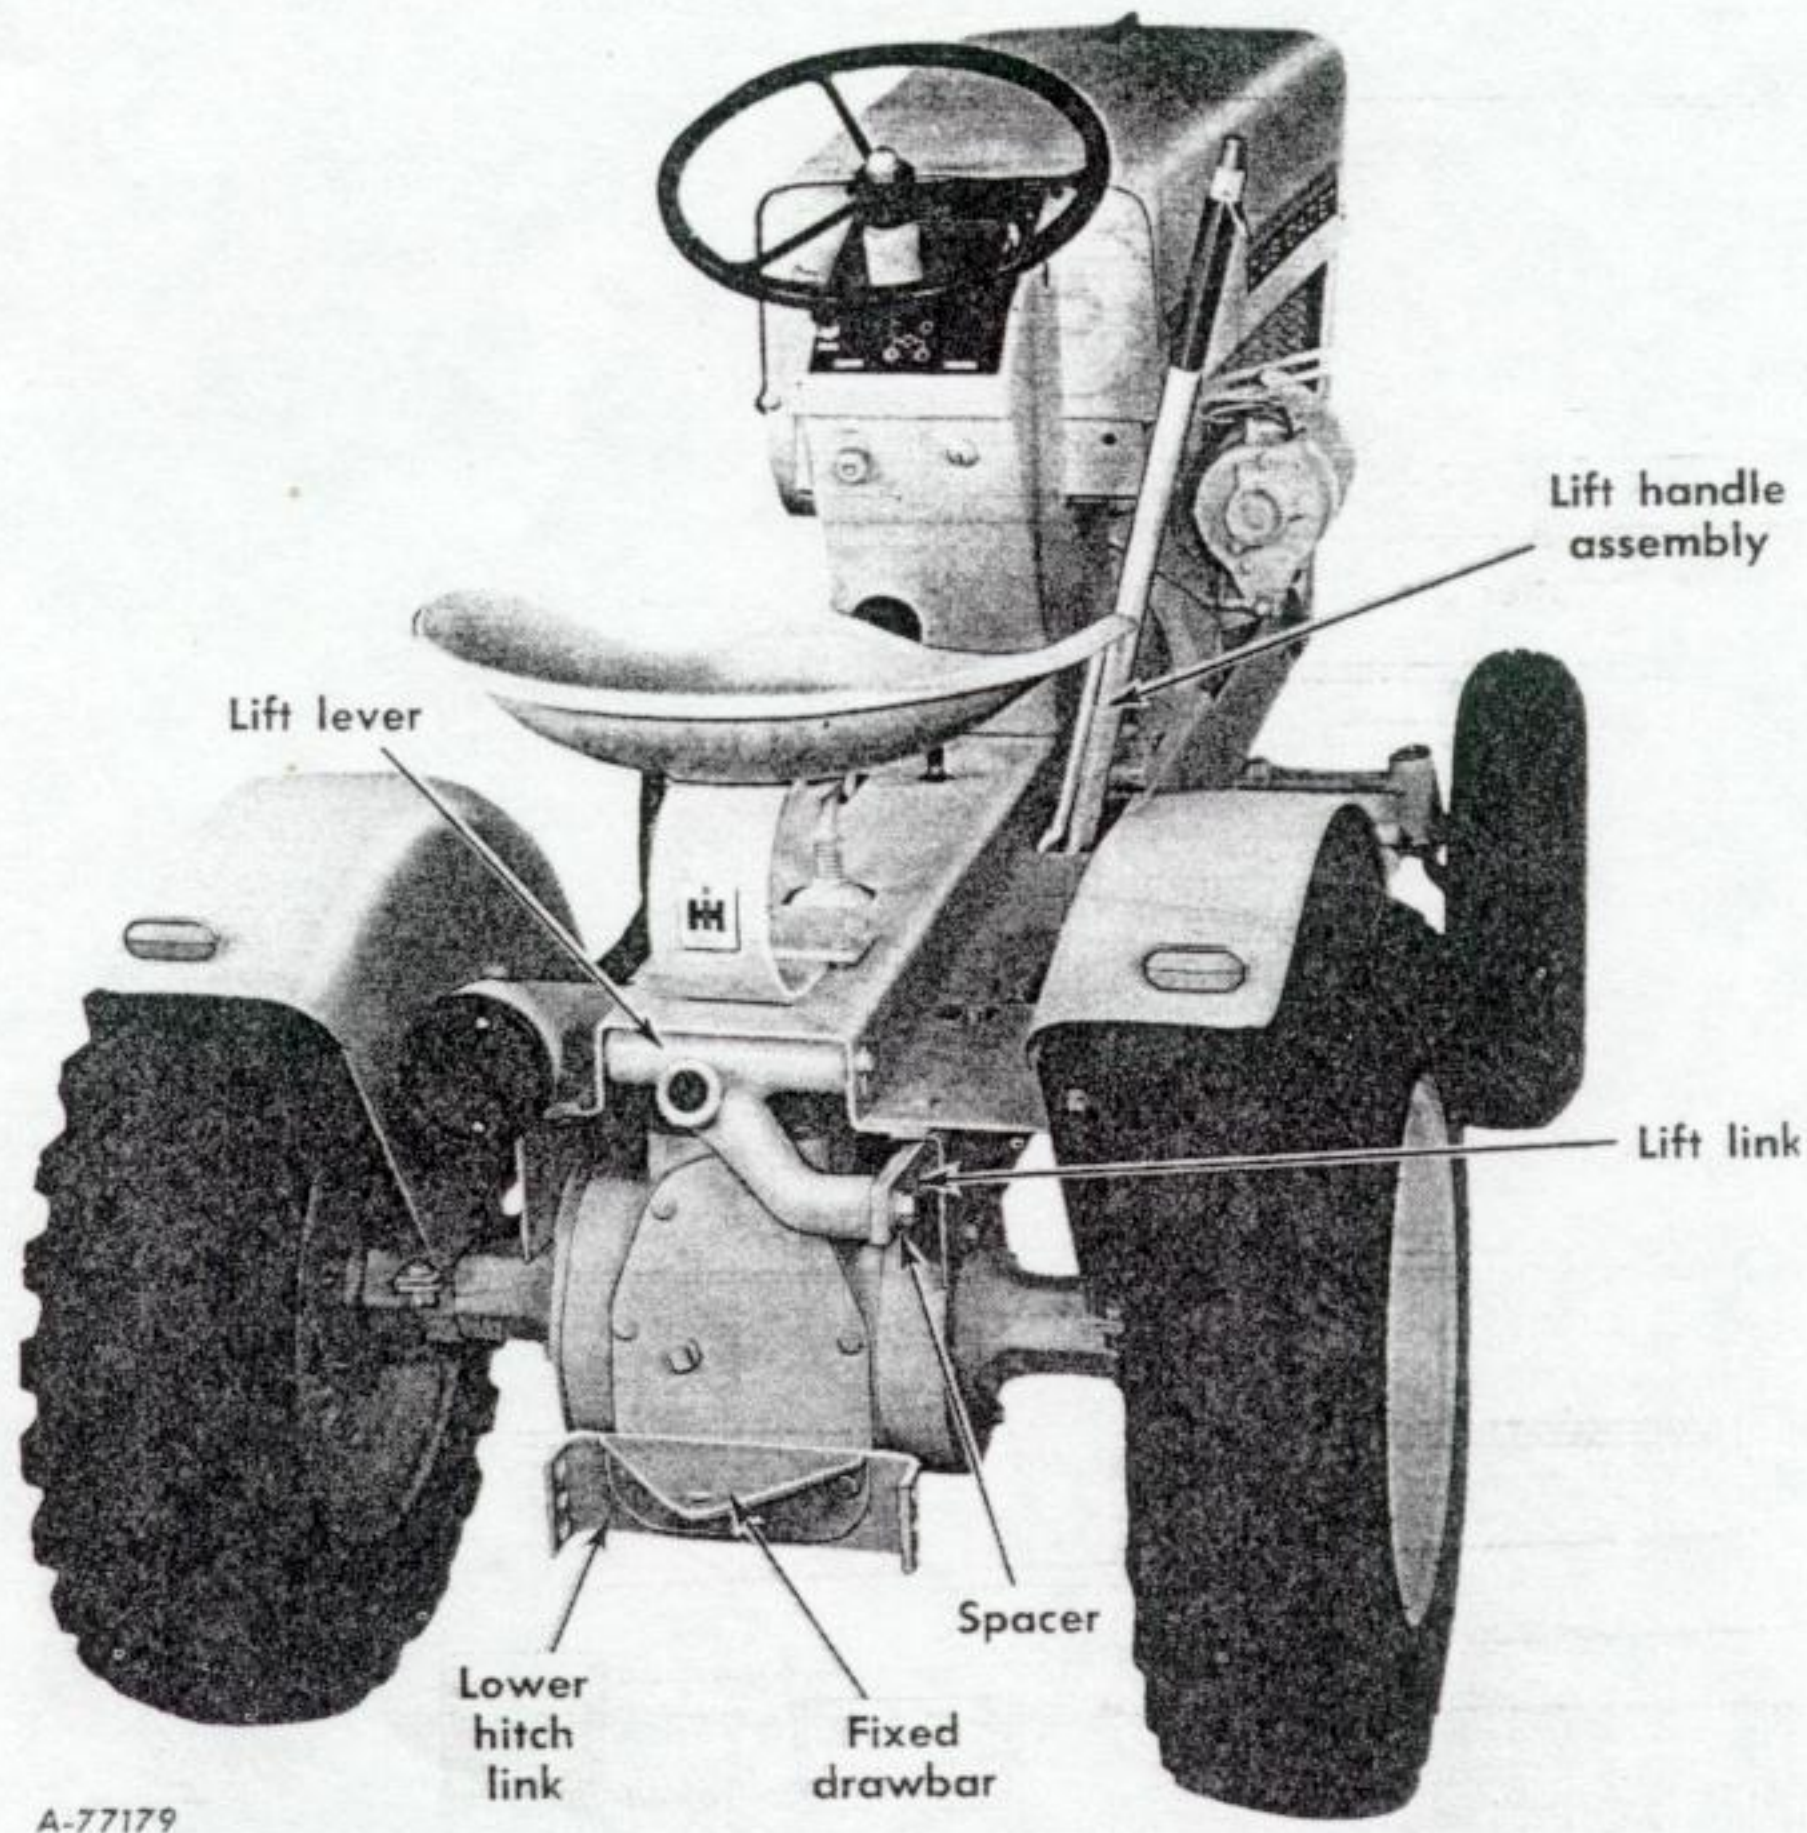

Illust. 2
Three-point hitch and drawbar
on the tractor.

Remove the transmission case oil drain plug from the transmission case rear cover plate (Illust. 2) and allow all oil to drain out, then replace the plug.

Remove and discard the transmission case rear cover shield. Then replace the cap screws at the top of the transmission case rear cover plate.

Remove and discard the three lower cap screws from the transmission case rear cover plate.

Note: Reference numbers in parenthesis following the description of a part in the following installation instructions are for identification purposes. See Illust. 1.

Install the lower hitch link (1) and fixed drawbar (2) at the bottom of the transmission case rear cover plate using the three $\frac{3}{8}$ x 1- $\frac{1}{4}$ -inch cap screws. See Illusts. 2 and 3.

Install the lift lever (3) onto the rear of the seat spring support using the shaft (4) and two $\frac{3}{32}$ x $\frac{7}{8}$ -inch cotter pins.

Remove the two cap screws, lock washers, and nuts holding the lift ratchet (Illust. 3) and spacer assembly at the right side of the frame.

Then remove the lift ratchet and spacer assembly.

Insert the lift bar (5) in, from the rear of the tractor, with the smaller hole to the front.


Assemble the lift bar attaching plate (7) to the lift bar (5) by inserting the pin on the attaching plate into the front hole in the lift bar and secure with a $\frac{3}{32}$ x 1-inch cotter pin. It may be necessary to tilt the lift bar and revolve the attaching plate enough so the cotter pin can be inserted in the hole in the attaching plate pin.

Install the lift bar attaching plate (7) (with the lift bar pin toward the rear) onto the lower end of the implement lift handle assembly (8) by inserting the two $\frac{5}{16}$ x $\frac{7}{8}$ -inch cap screws with lock washers and plain washers through the slot in the lift handle and into the tapped holes in the lift bar attaching plate. The bottom cap screw must contact the bottom of the slot in the lift handle.

Assemble the rear end of the lift bar (7) to the tapped hole in the lift lever (3) using the plain spacer (6) and a $\frac{1}{2}$ x 1- $\frac{3}{8}$ -inch cap screw with flat washer and lock washer.

Refill the transmission case with the proper lubricant as instructed in the tractor operator's manual.

INSTALLING INSTRUCTIONS

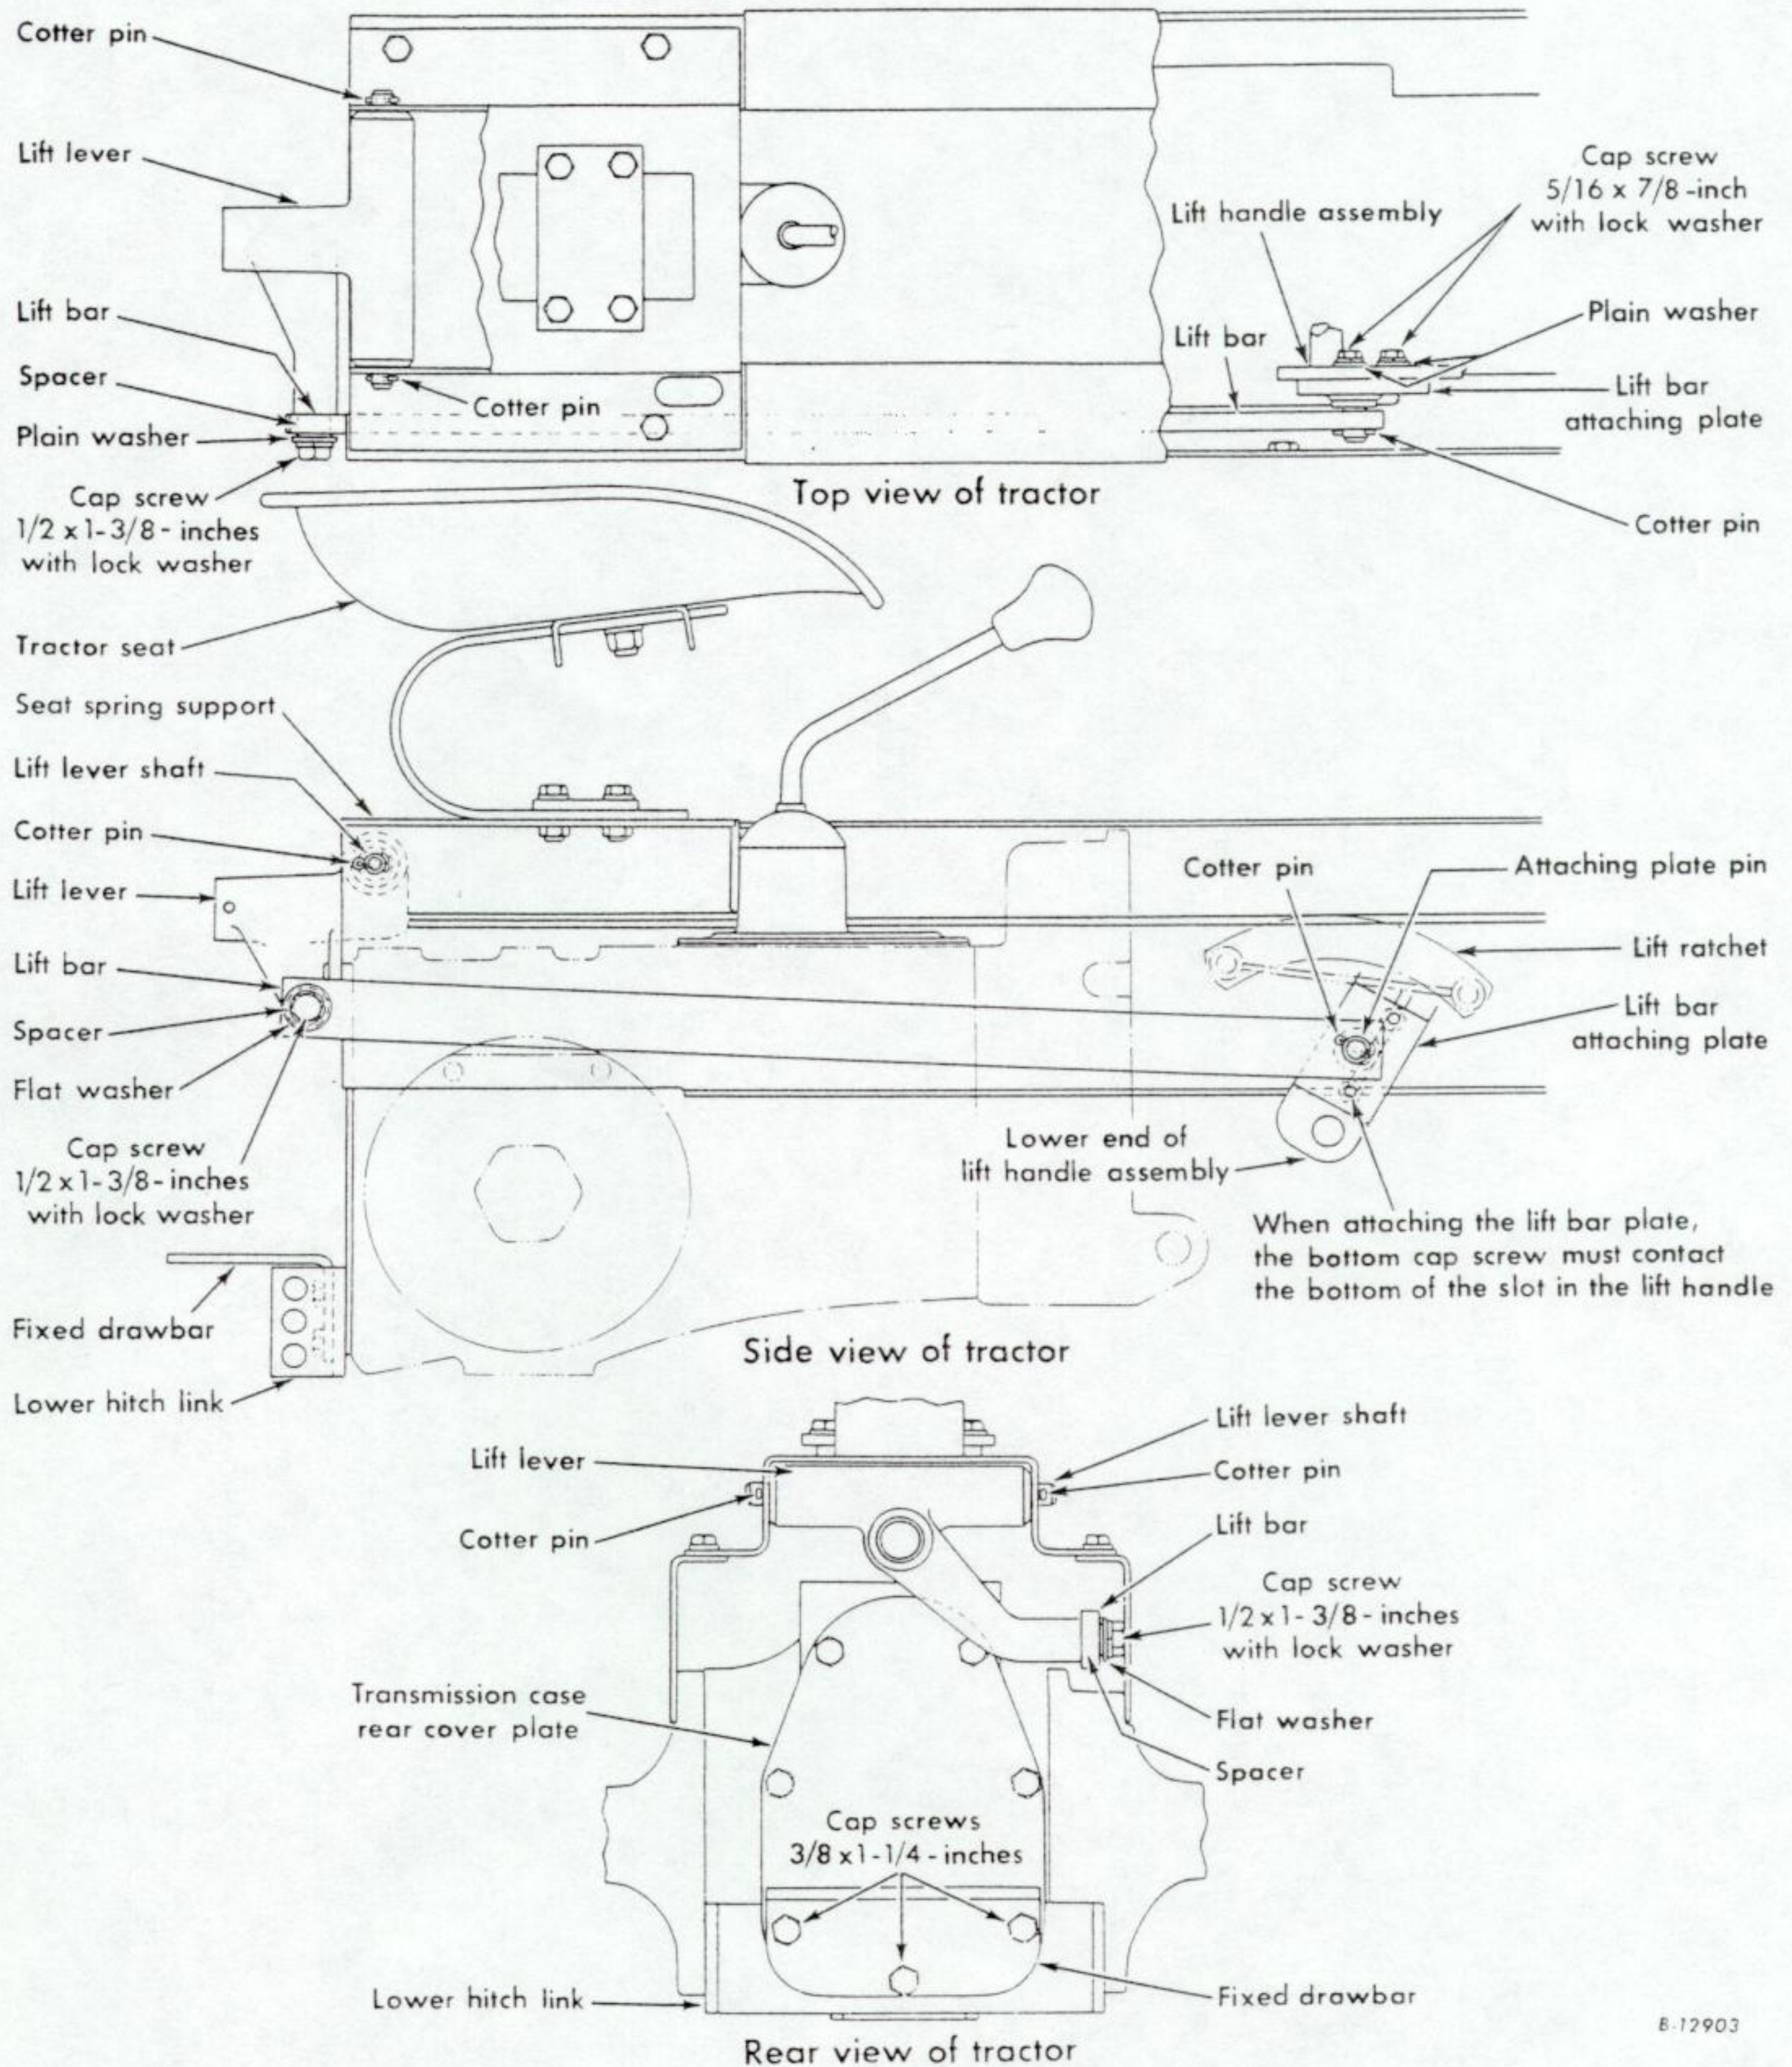

B-12903

Illust. 3
Three-point hitch installation diagram.