

# *Installing Instructions*

REAR WHEEL FENDERS  
(384 749 R91)

for

INTERNATIONAL<sup>®</sup>

CUB CADET<sup>®</sup>

70 and 100

Tractors

INTERNATIONAL HARVESTER COMPANY

180 NORTH MICHIGAN AVE.

CHICAGO 1, ILLINOIS, U.S.A.




It is the policy of International Harvester to improve its products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to make such changes on products sold previously.

All illustrations and descriptive matter in this publication apply to International Harvester products sold under the International, McCormick, or McCormick-International trade name.

## ORDERING NUMBER

384 749 R91      Rear Wheel Fenders for International Cub Cadet 70 and 100 Tractors

## INSTALLING INSTRUCTIONS

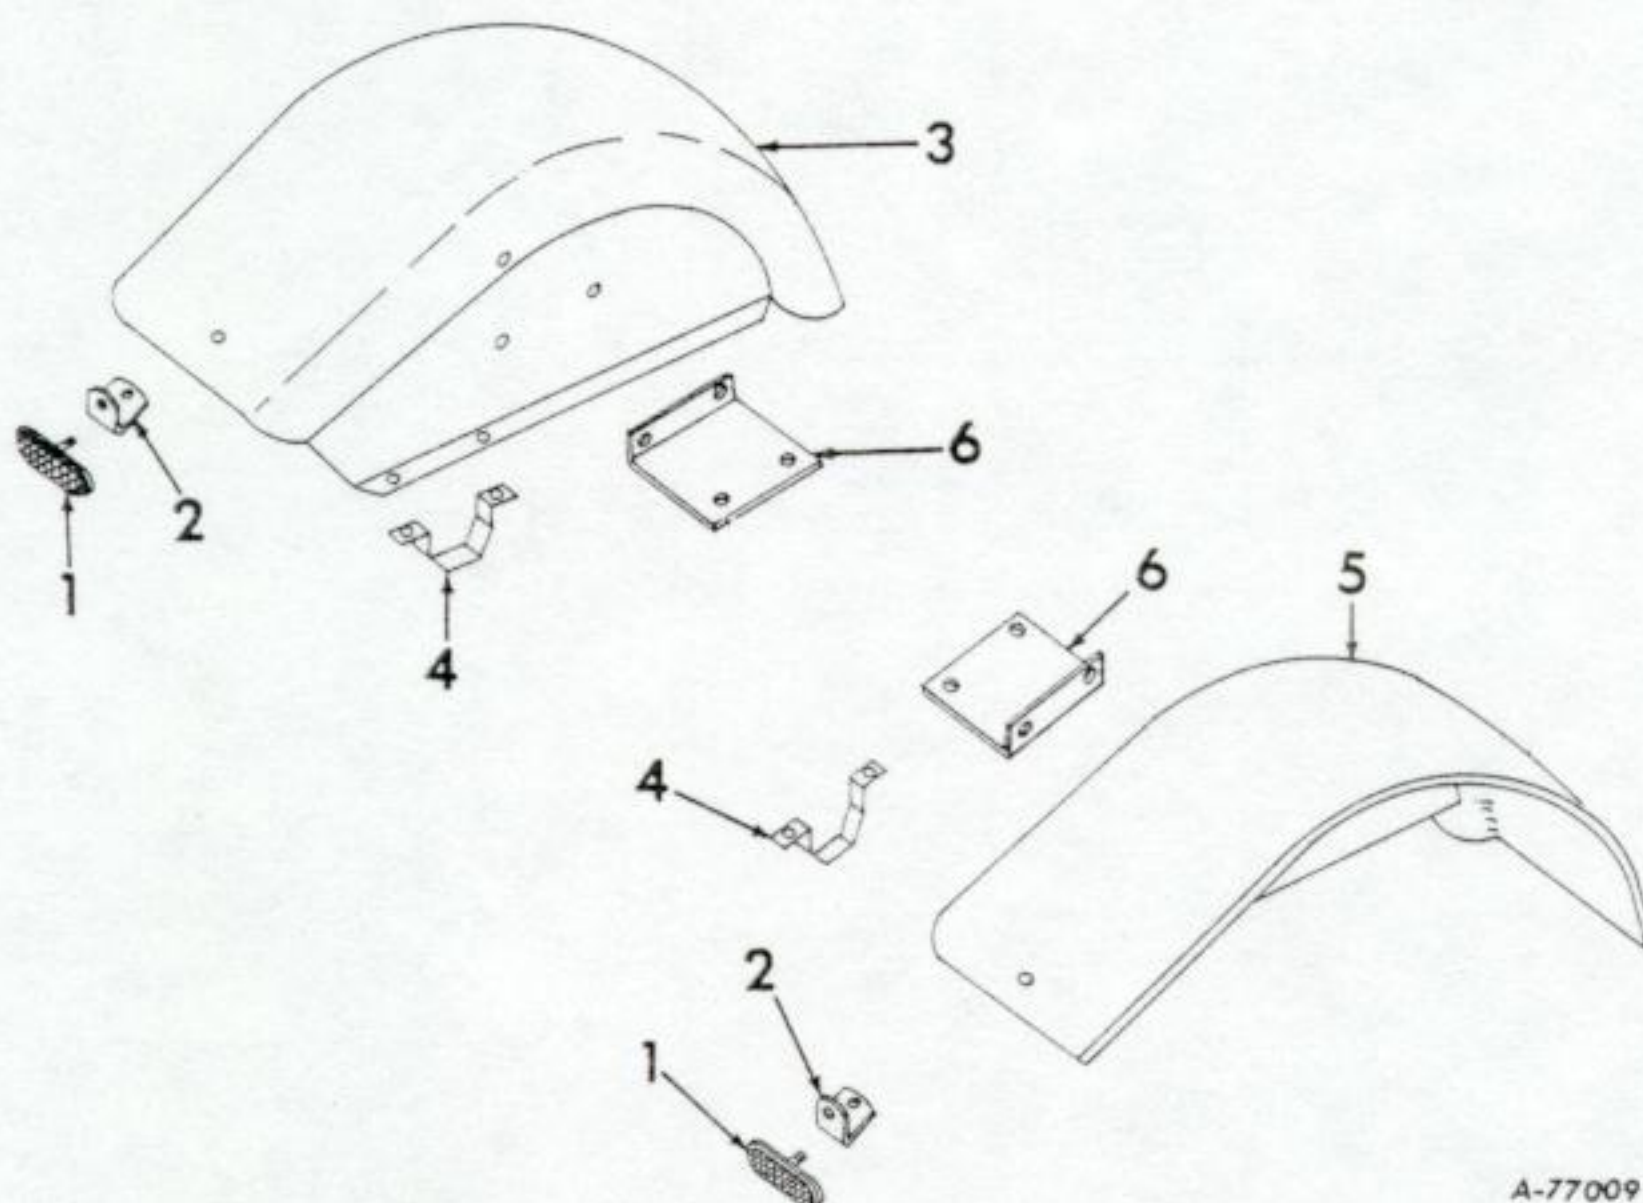


A-77009

Illust. 1  
Rear wheel fenders showing relative positions of parts.

Ref. No.	Description
1	Reflector (2)
2	Reflector bracket (2)
3	Left fender
4	Fender mounting clamp (2)
5	Right fender
6	Fender frame mounting bracket (2)



## INSTALLING INSTRUCTIONS

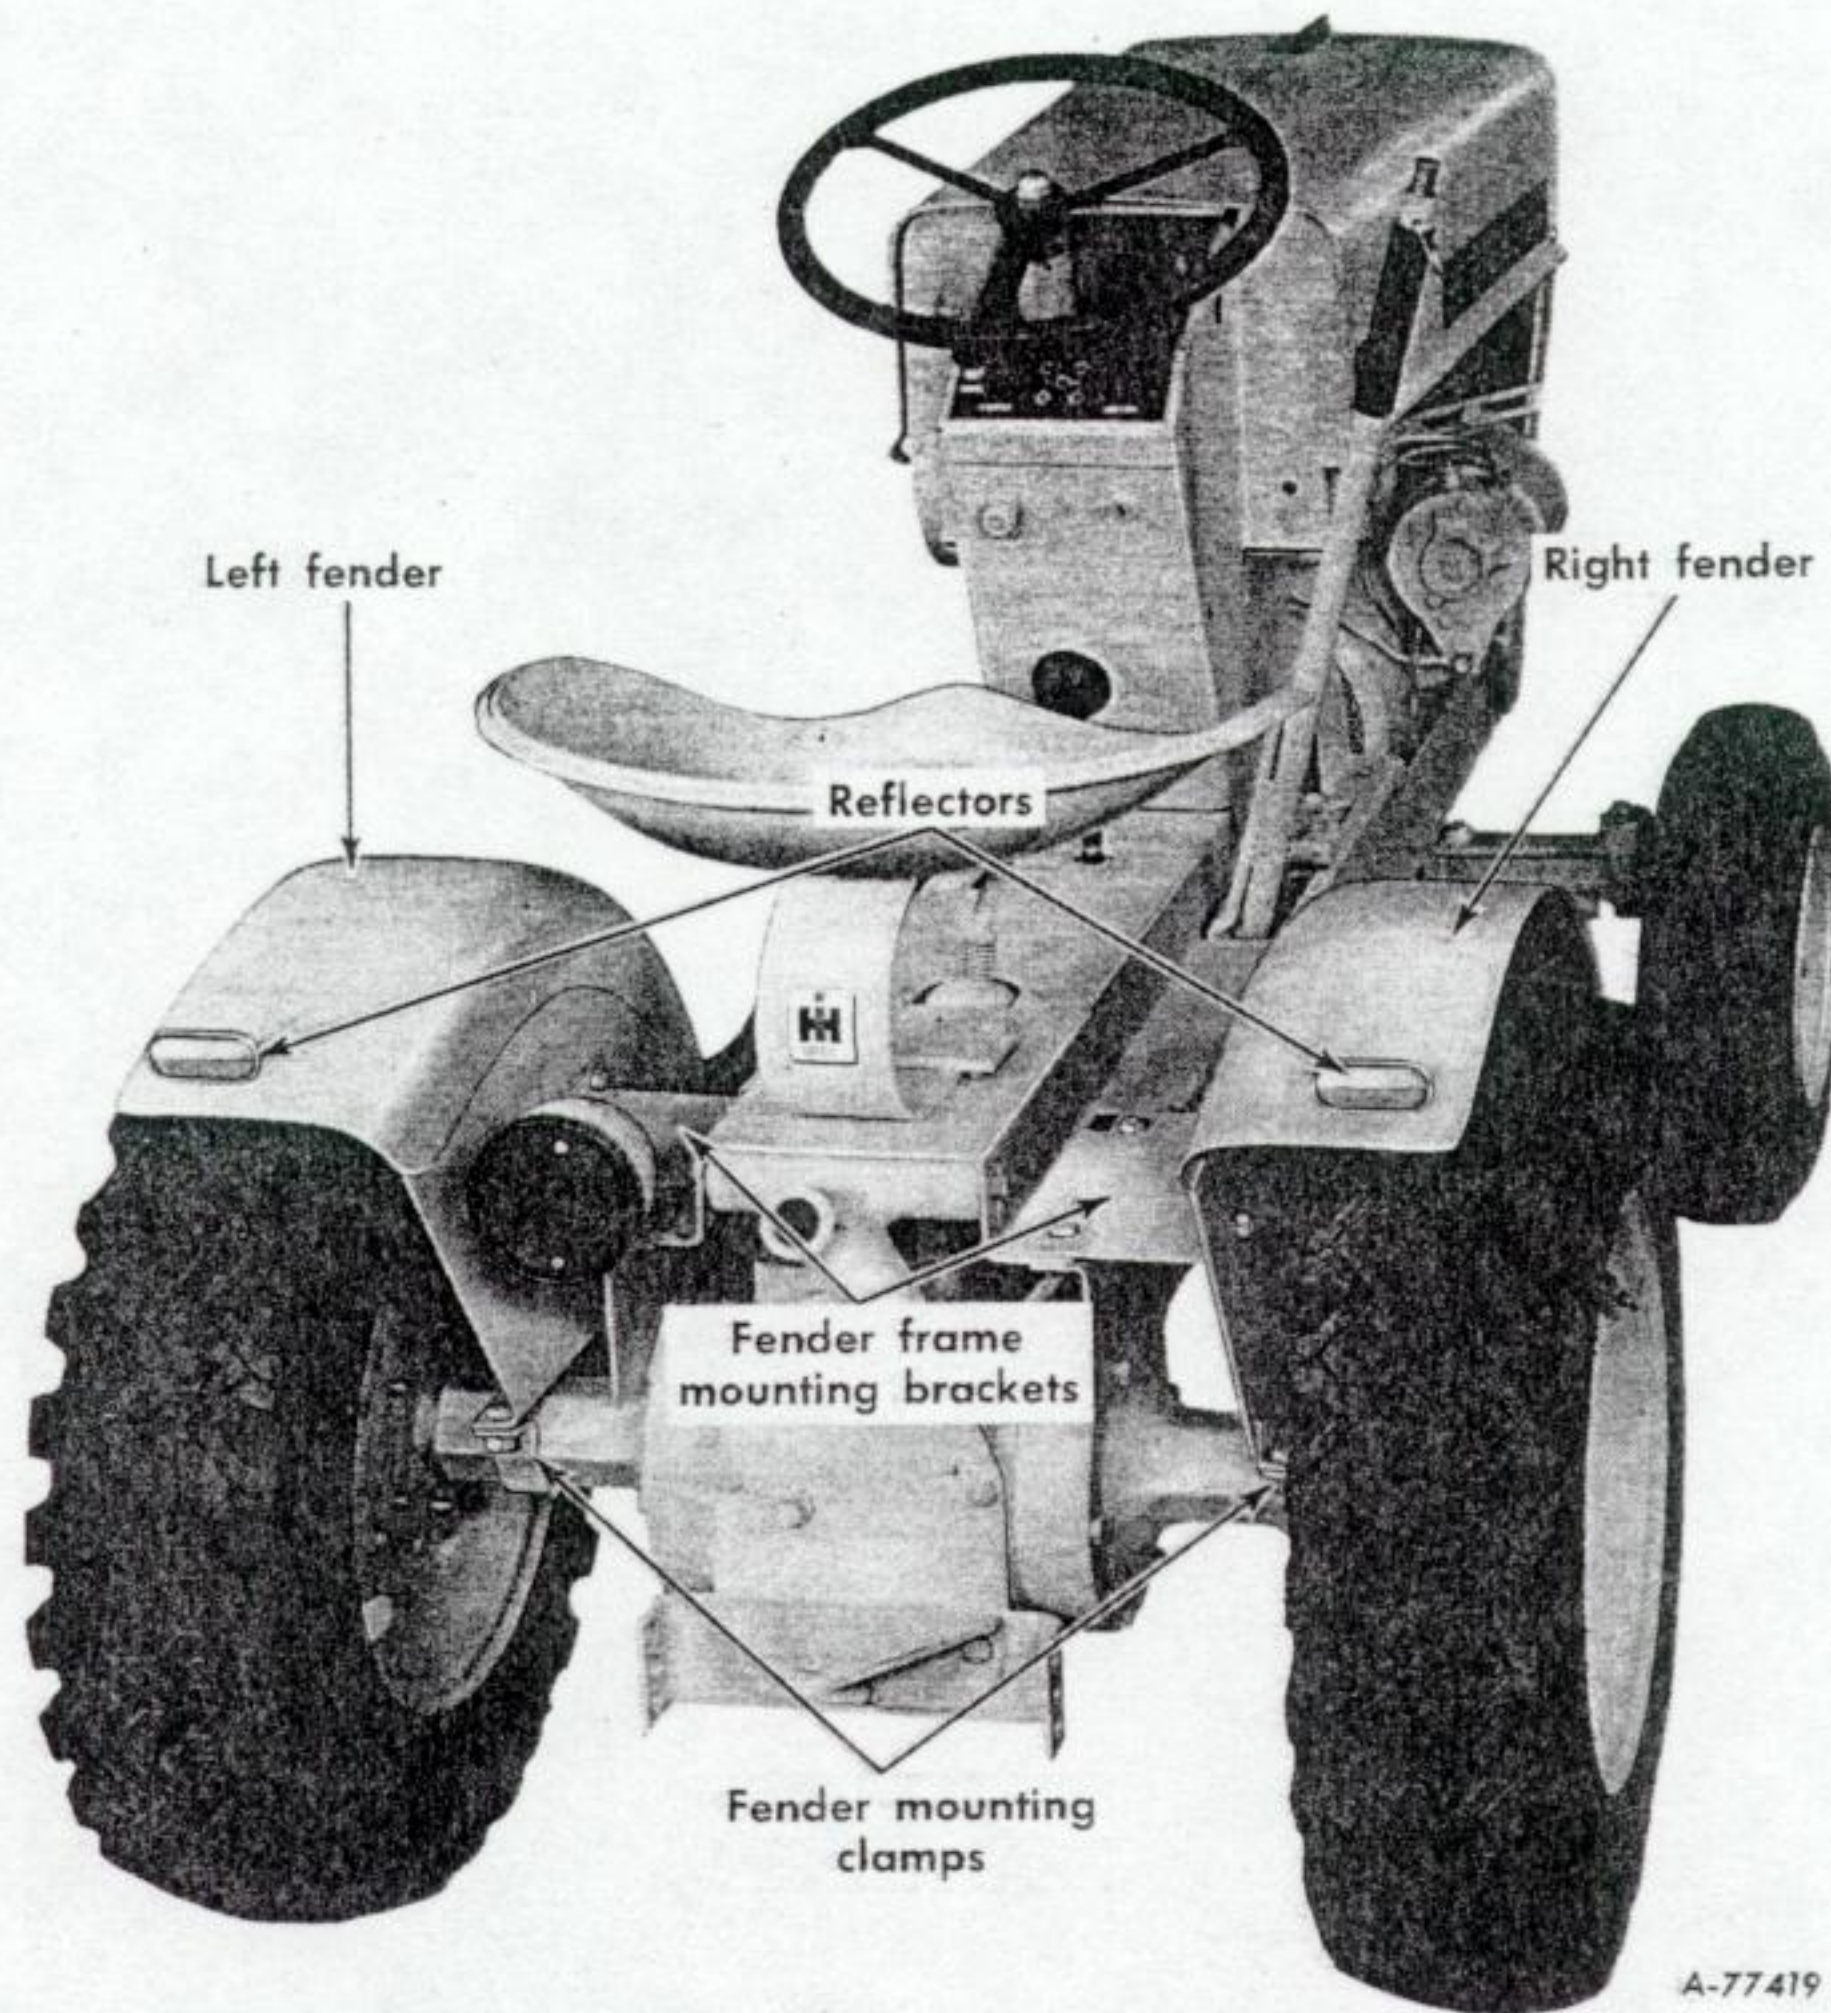

Illust. 2  
Rear wheel fenders on the tractor.

Note: Reference numbers in parenthesis following the description of a part in the following installation instructions are for identification purposes. See Illust. 1

Remove the two cap screws from the right side of the seat support assembly and install one of the fender frame mounting brackets (6) using the same two cap screws.

Assemble the right fender (5) to bracket (6) using two 5/16 x 5/8-inch cap screws, nuts and lock washers. See Illust. 3.

Secure the bottom of the fender to the right rear axle carrier with one of the fender mounting clamps (4) using two 3/8 x 7/8-inch cap screws, nuts, and lock washers. See Illust. 3.

Remove the two cap screws from the left side of the seat support assembly and install the remaining fender frame mounting bracket (6) using the same two cap screws.



Assemble the left fender (3) to bracket (6) using two 5/16 x 5/8-inch cap screws, nuts, and lock washers. See Illust. 3.

Secure the bottom of the fender to the left rear axle carrier with the remaining fender mounting clamp (4) using two 3/8 x 7/8-inch cap screws, nuts, and lock washers. See Illust. 3.

Install the reflector brackets (2) and the reflectors (1) on each fender using the four 10-24 x 3/8-inch round head slotted screws, nuts, and lock washers. See Illusts. 2 and 3.



# INSTALLING INSTRUCTIONS

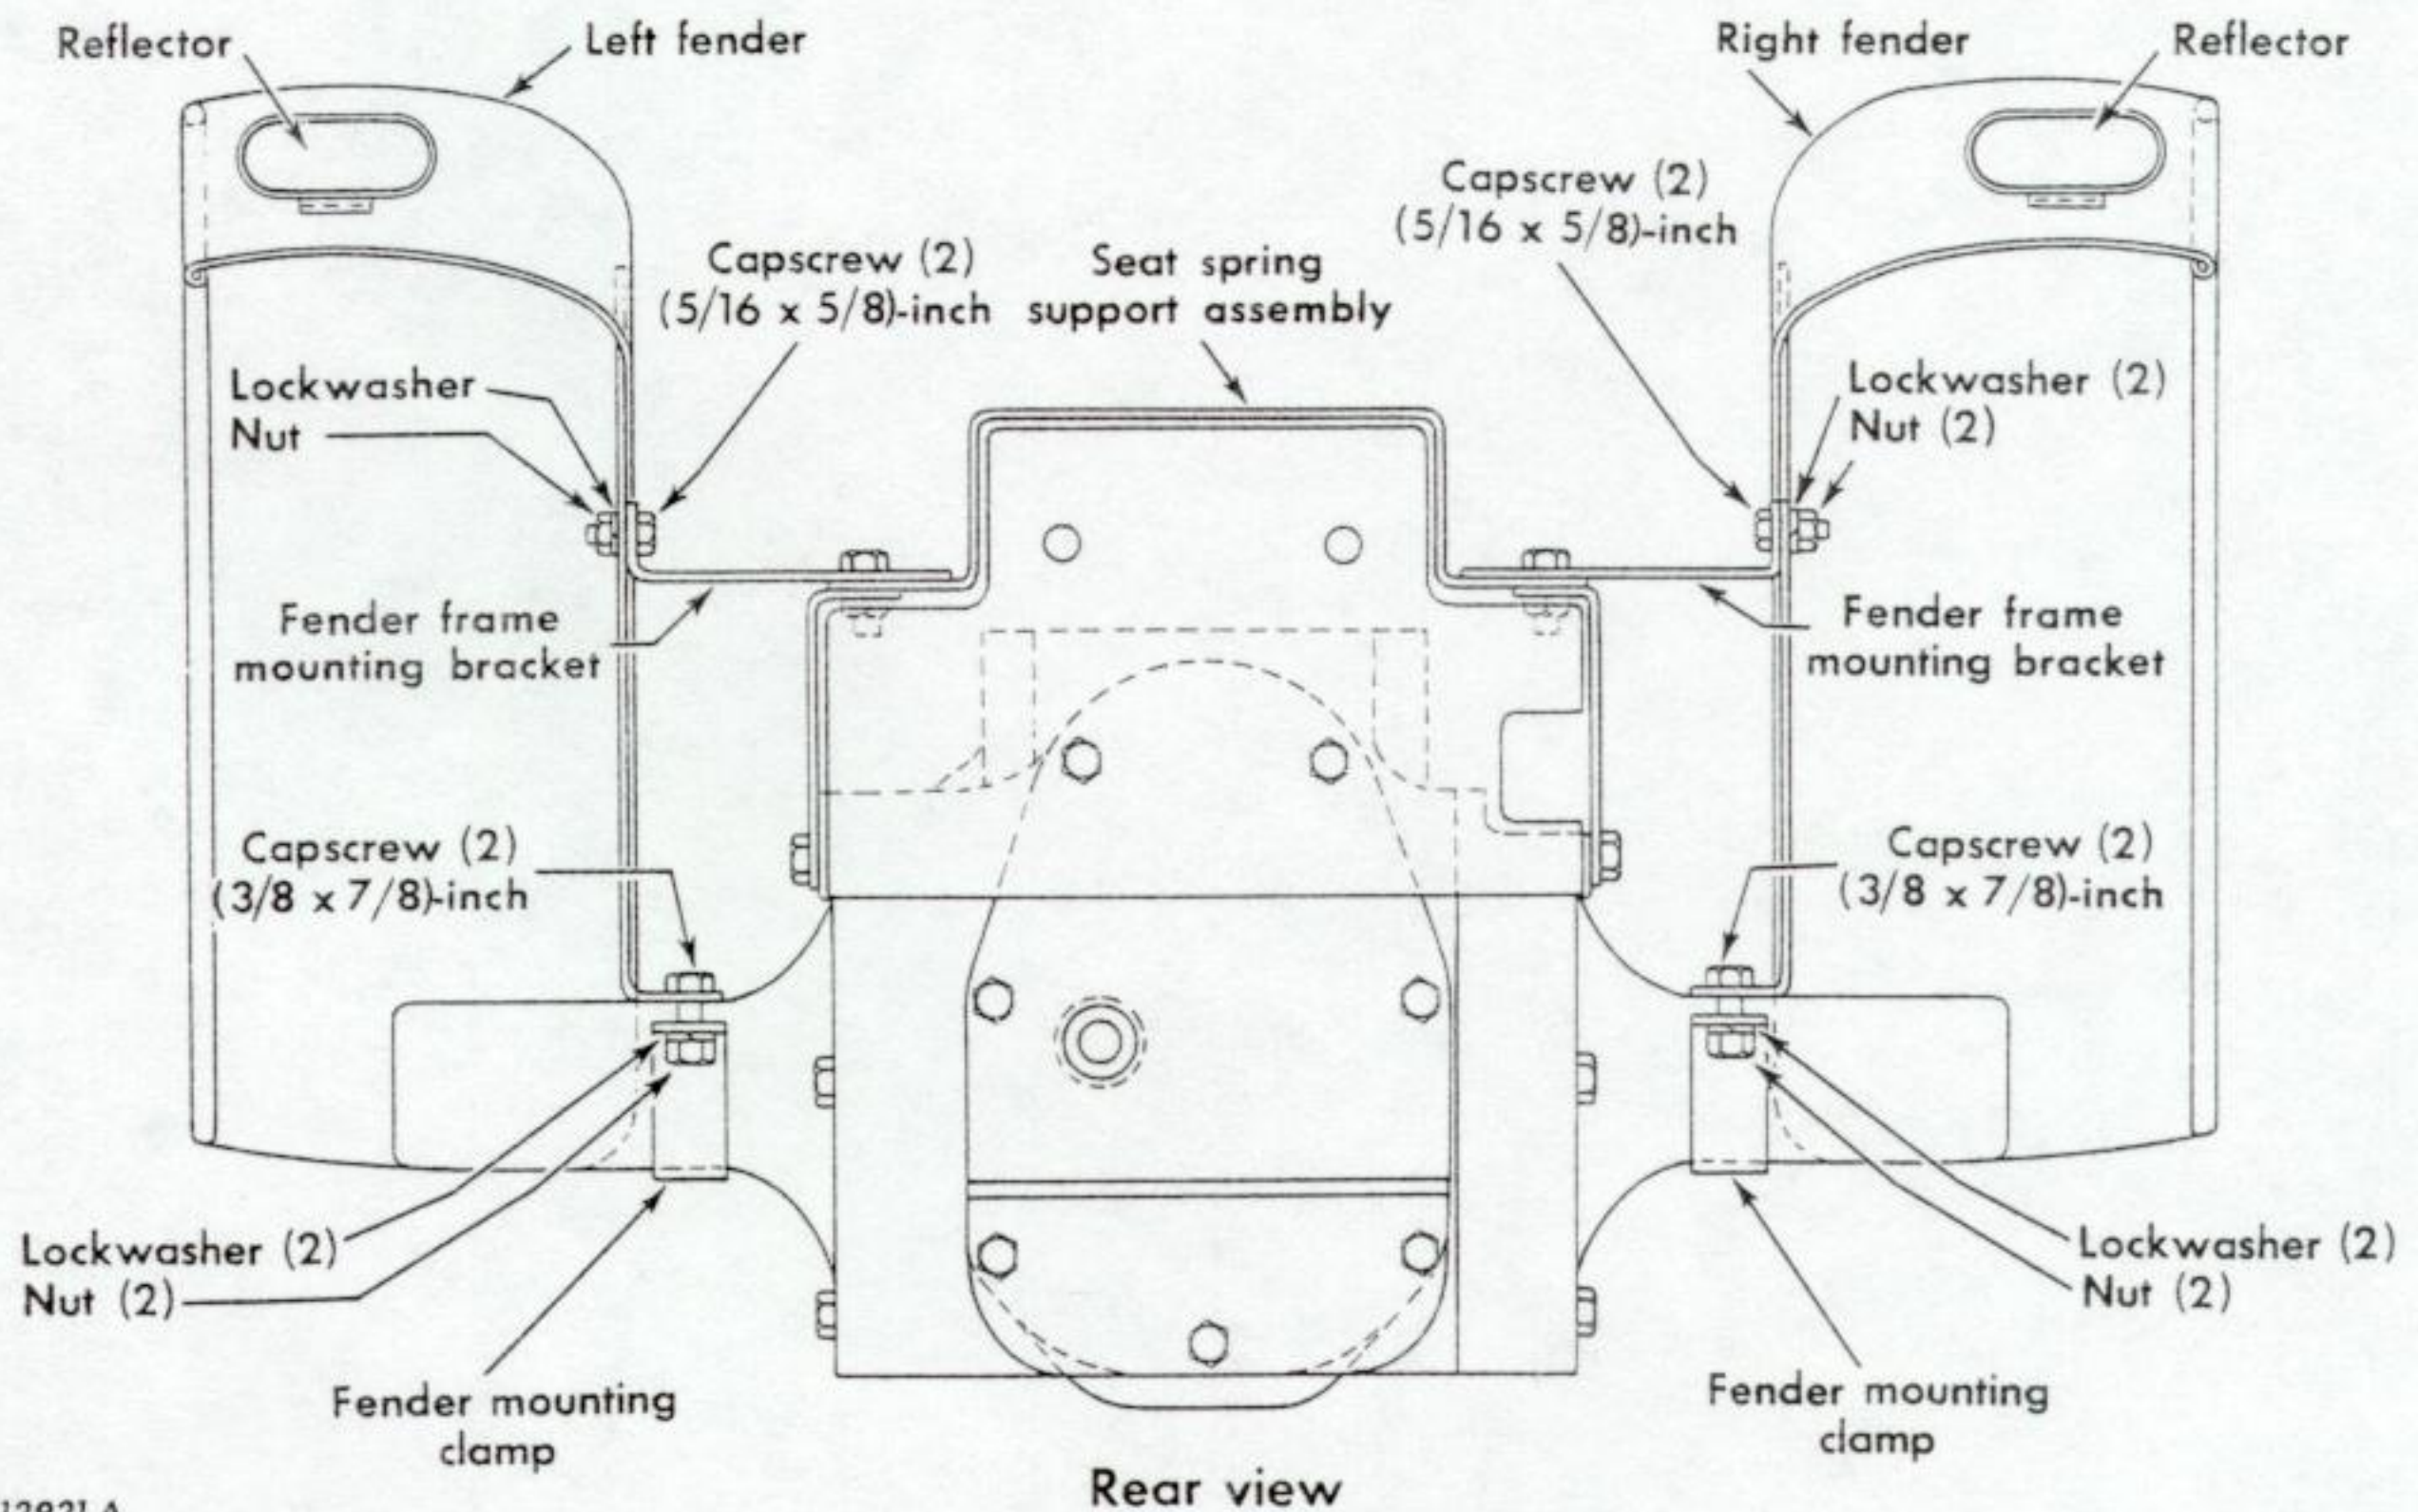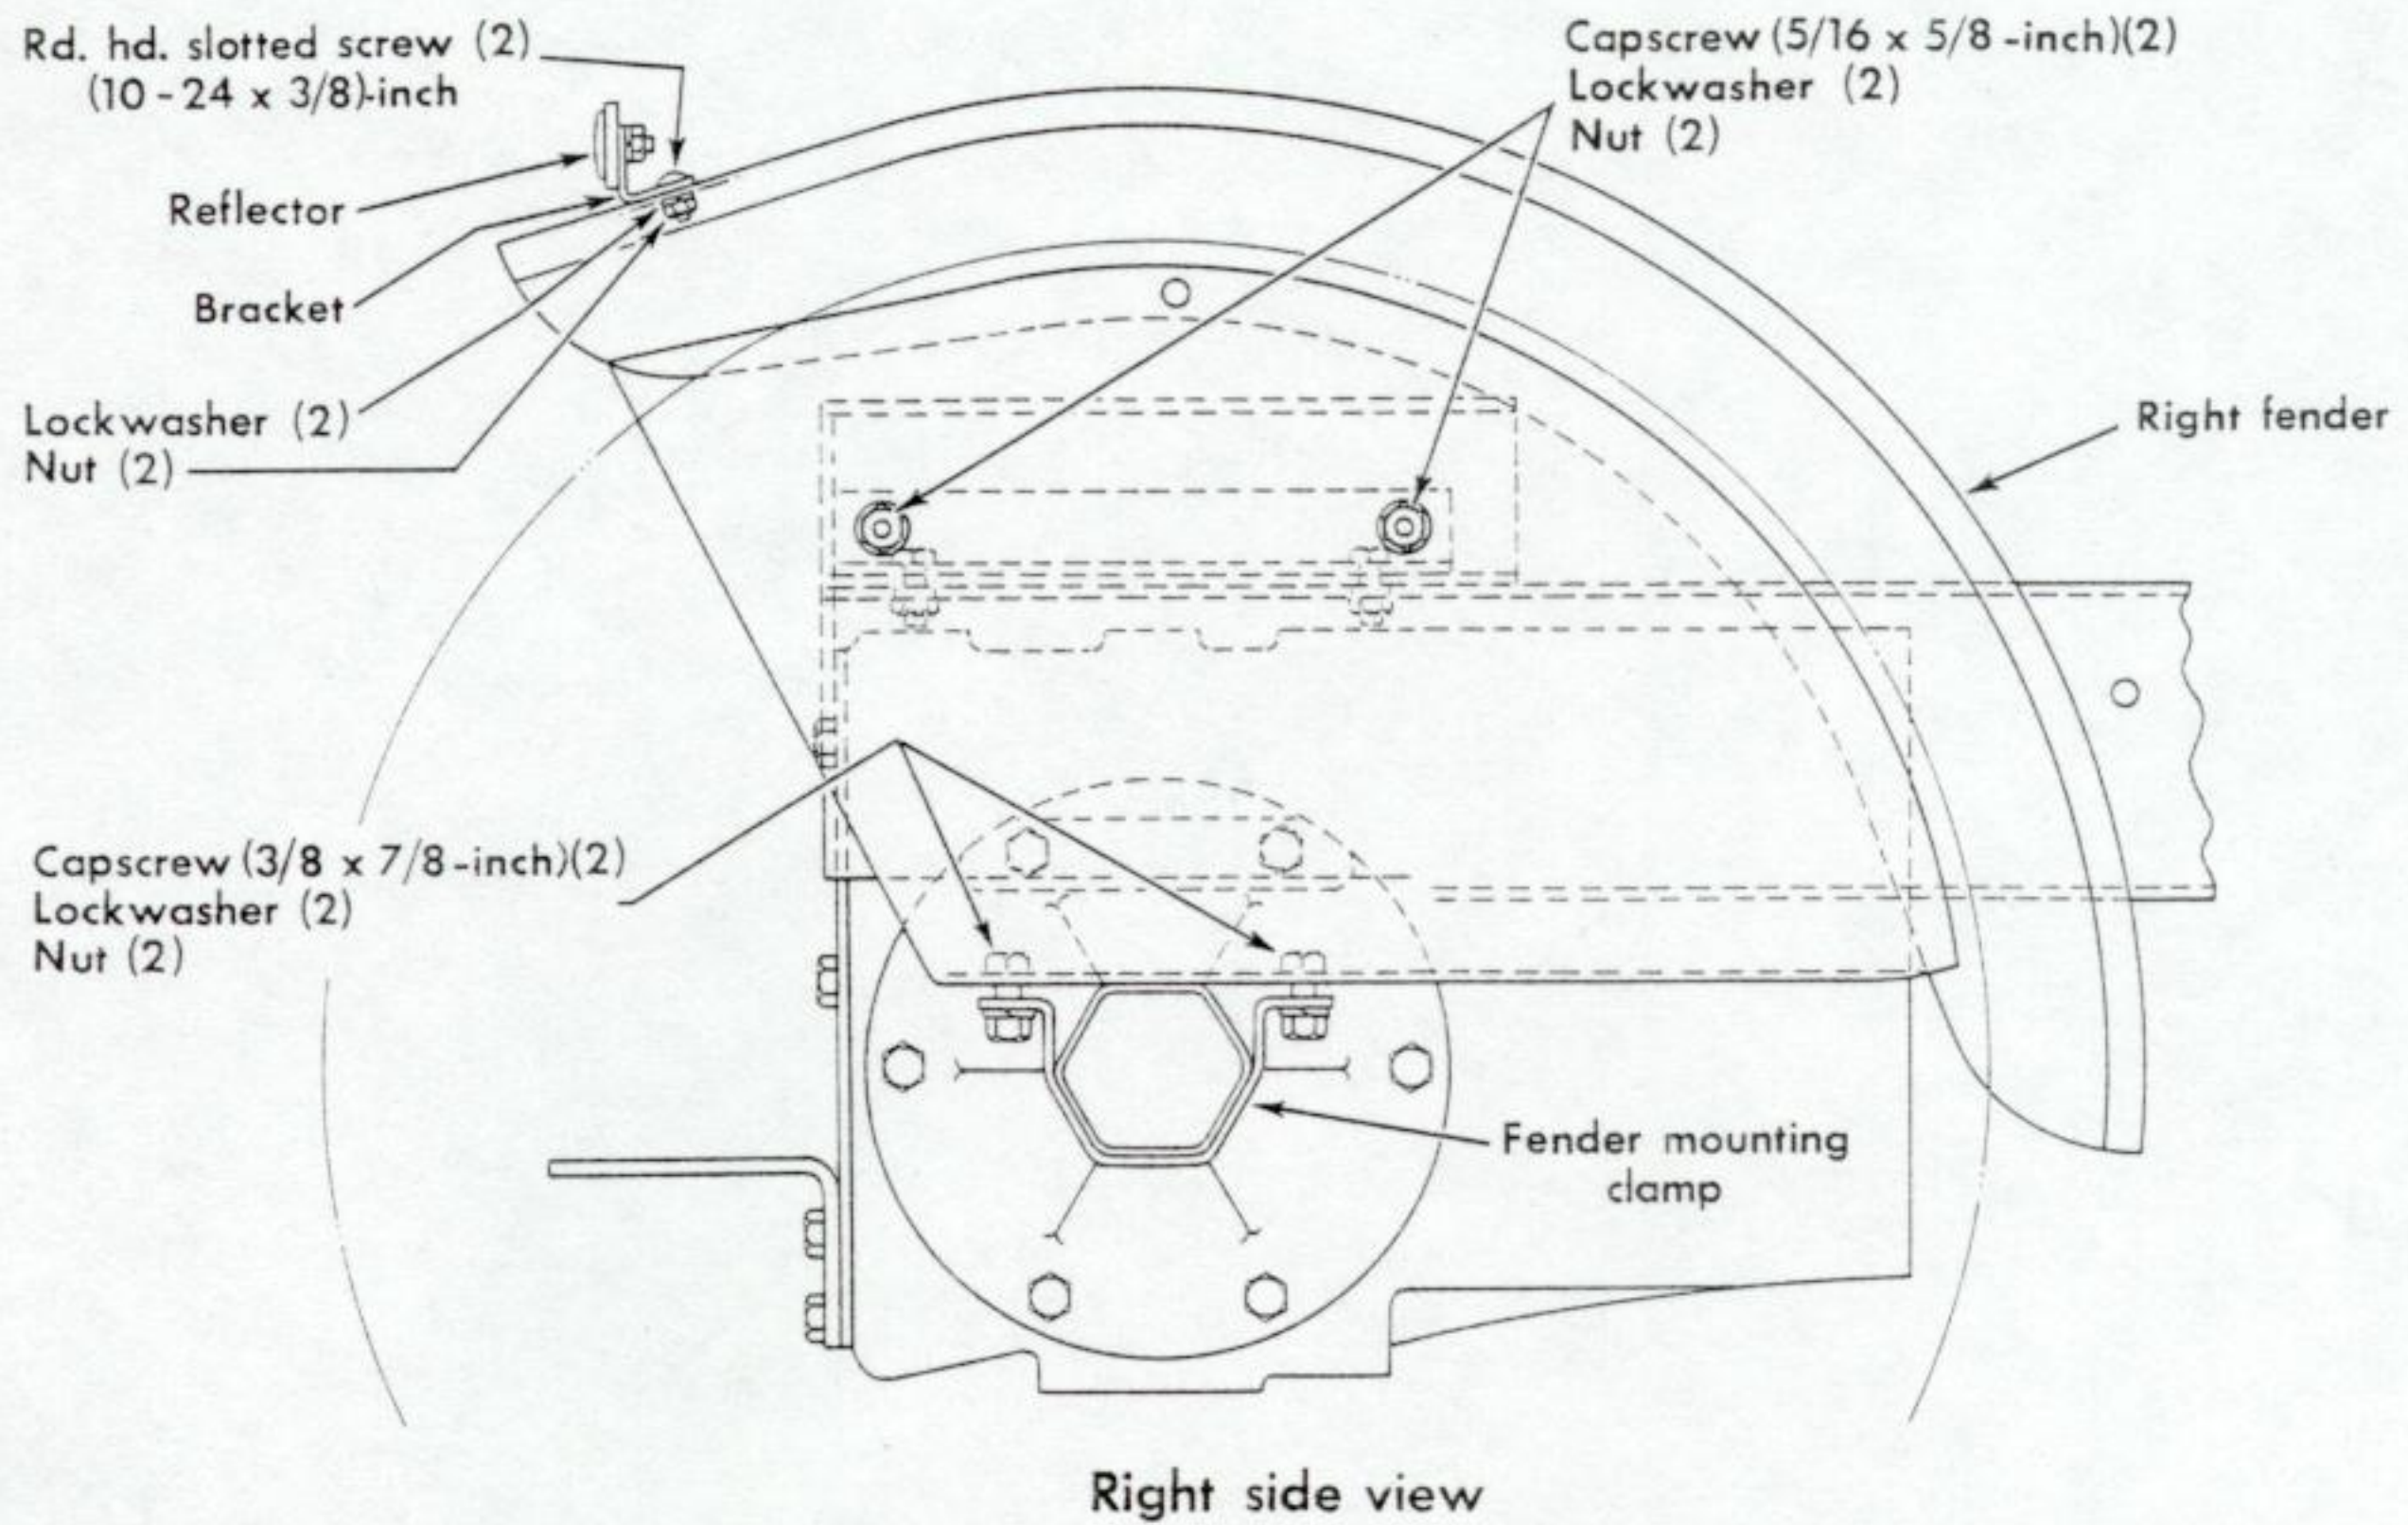

B-12921 A

Illust. 3  
Rear wheel fender installation diagram.