


INSTRUCTIONS FOR INSTALLATION OF
No. 407 115 R1
WINDBREAKER BACK CURTAIN

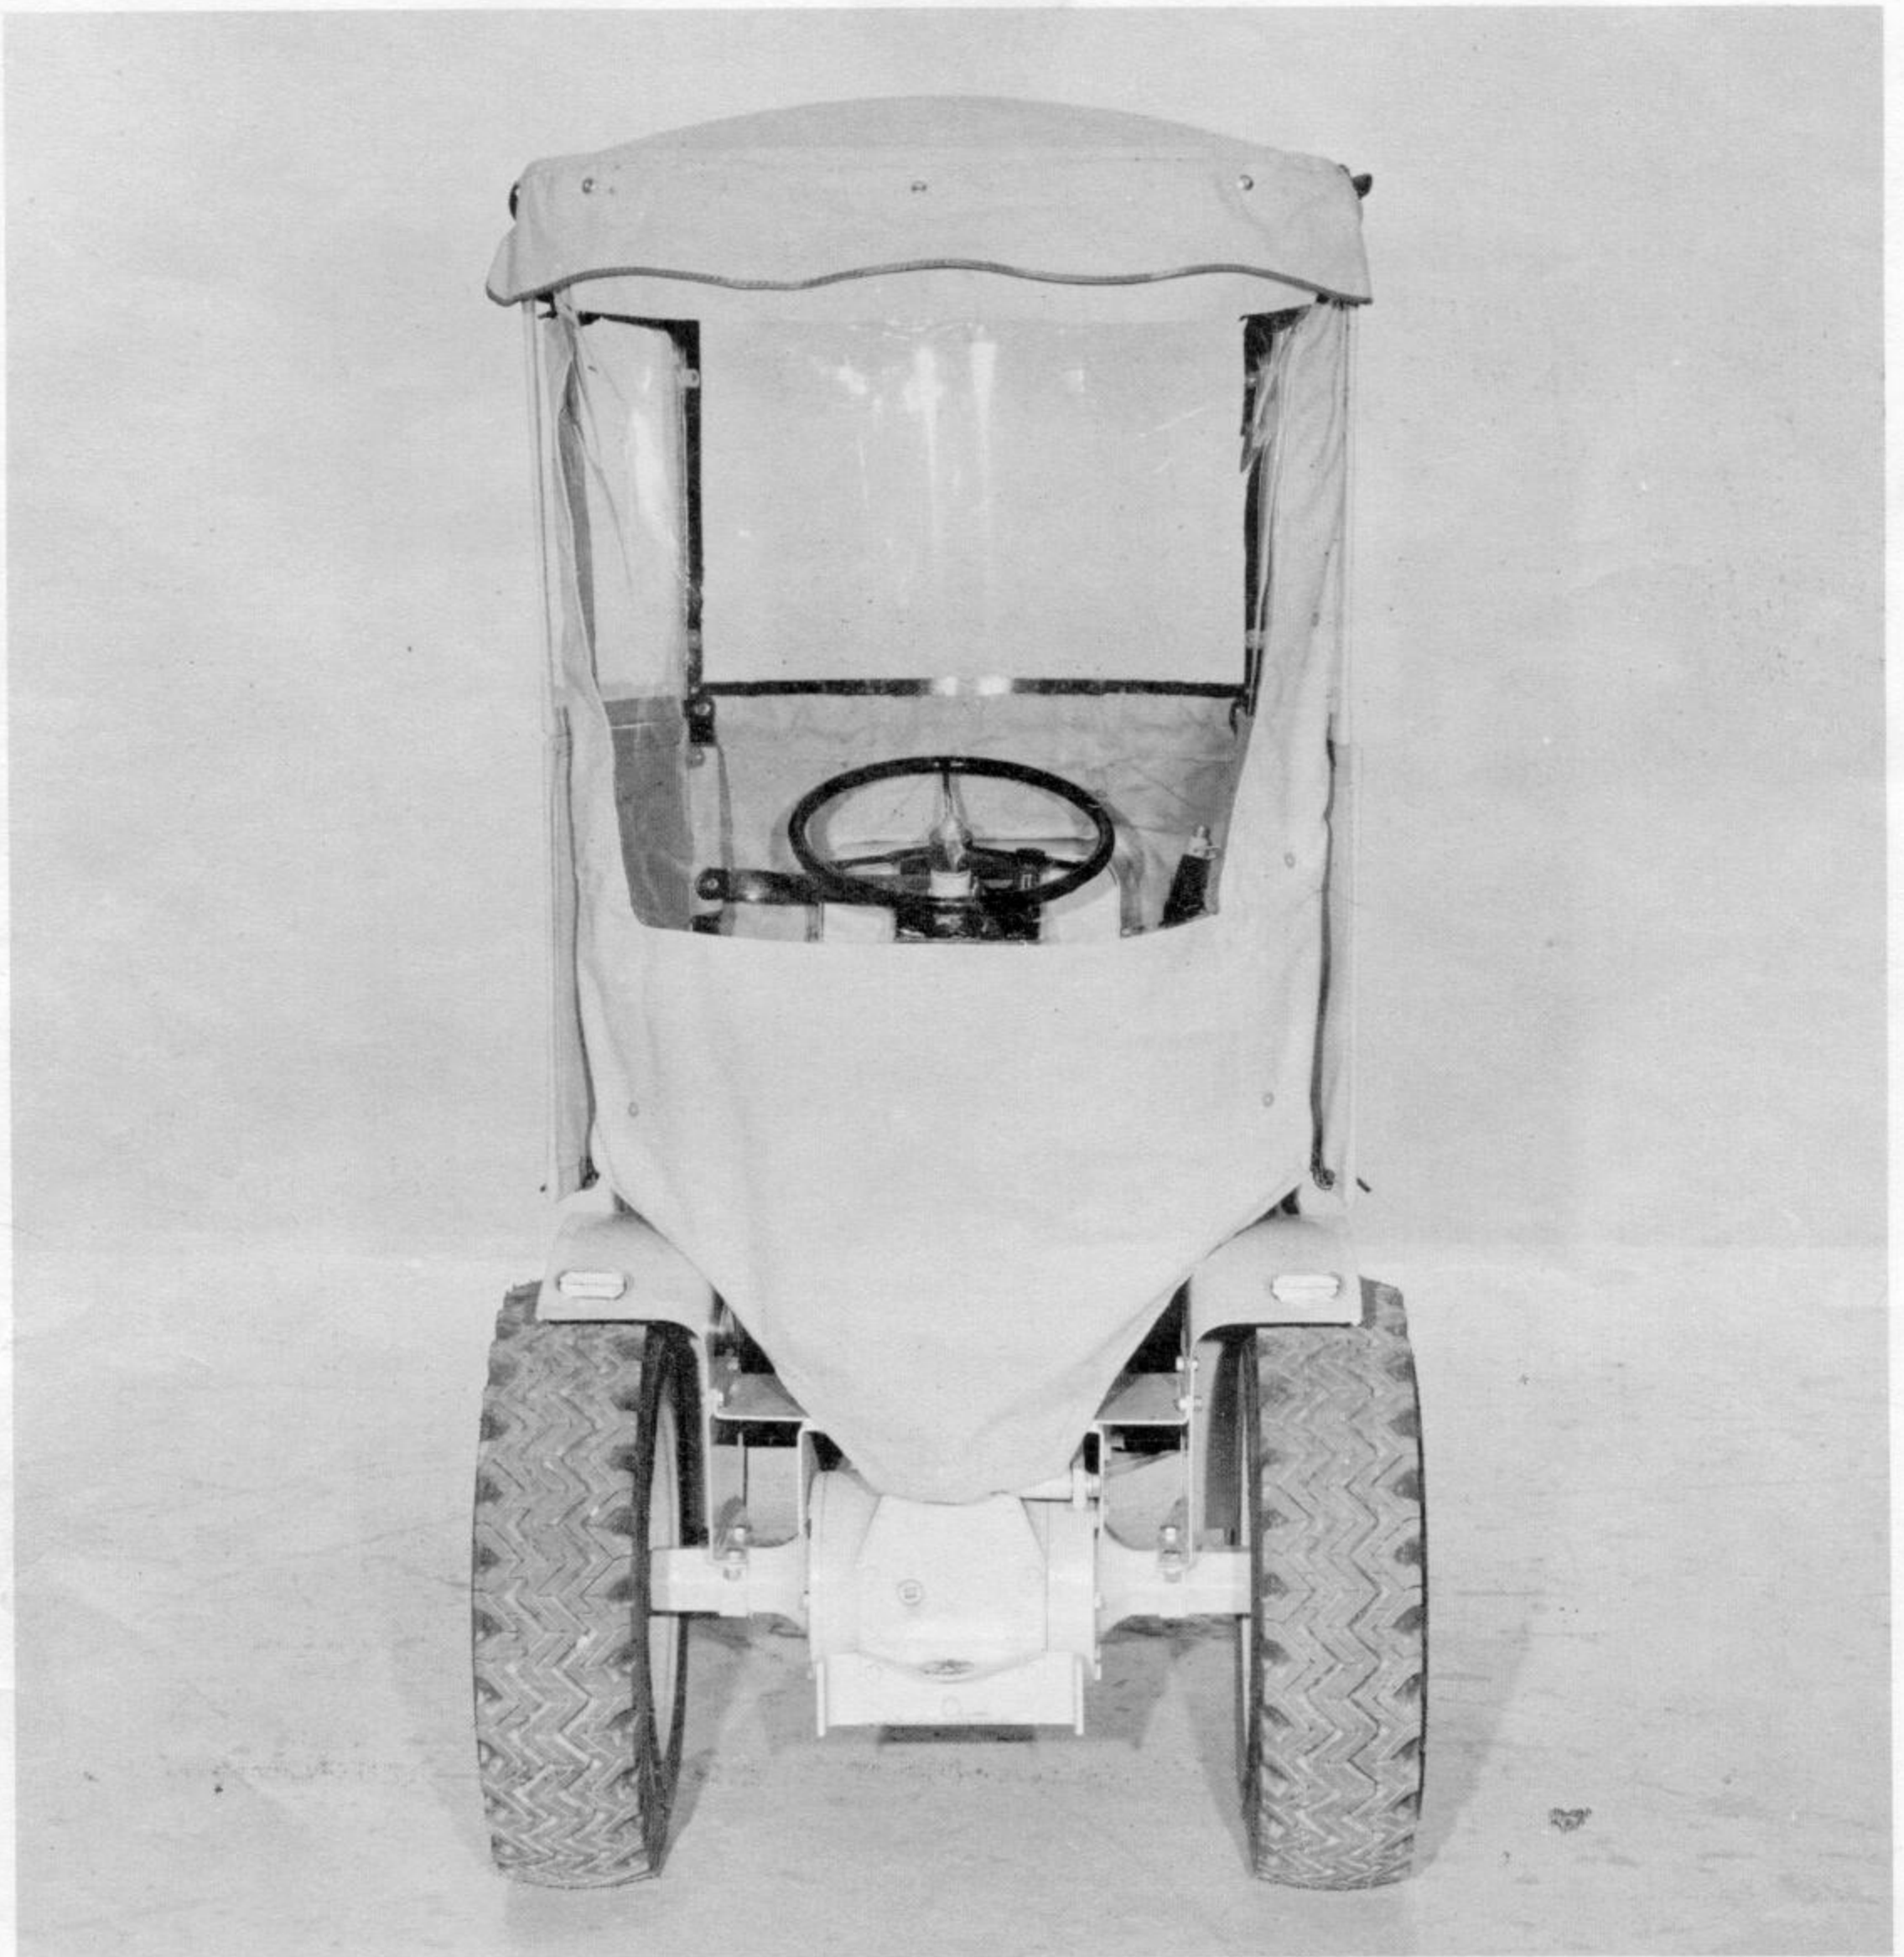

1. Snap top of back curtain to top. Tie tape at top to top.
2. Snap sides of canvas around both rear uprights of top as shown.